

92500 to 92599

Illustrated Parts List

MODEL SERIES

92500 to 92599

TYPE NUMBERS

0110 through 0280

0600 through 0862

TO FIND


**THE CORRECT NUMBER OF THE PART YOU NEED:
FOLLOW THE INSTRUCTIONS BELOW.**

- A. Refer to Engine Model, Type and Code Number (formerly Serial Number) that is stamped on the blower housing or name plate of engine. (Engine type numbers such as 400108 are listed complete. Engine type numbers such as 0147 01 are listed herein only as 0147. The two digits (01 or 02, etc.) to the right of the space are not needed for parts identification). Then use the Illustrated Parts List covering these Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Reference and Master Part Numbers are listed. THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE"
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type Number is listed under "Note" order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note" use the Master Part Number.
- F. For Type Numbers higher than those covered by this book, please refer to the factory if you are unable to identify the part by comparison.

PRINTED IN U.S.A.





92500 to 92599

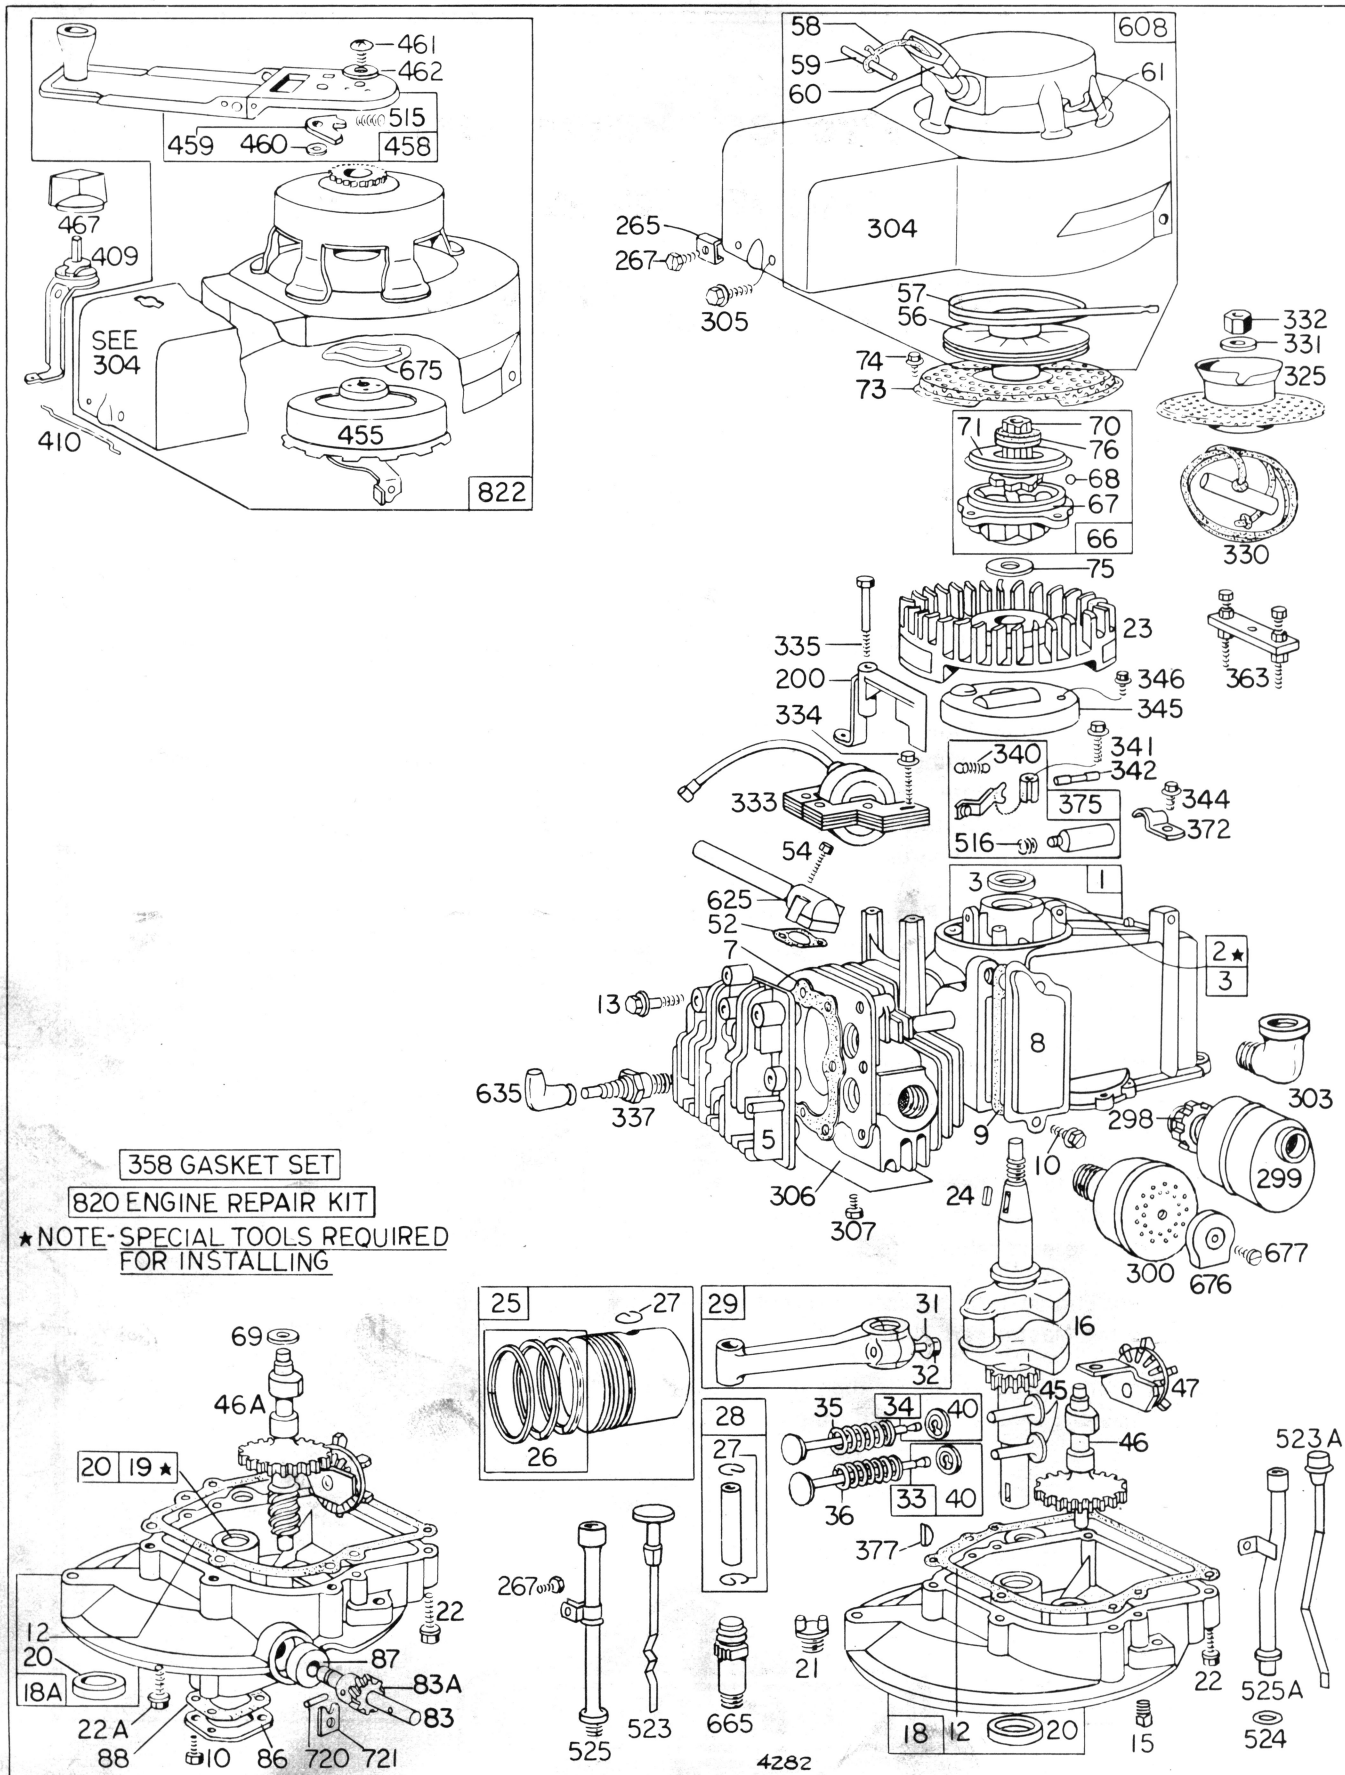

Assemblies include all parts shown in frames.

92500 to 92599

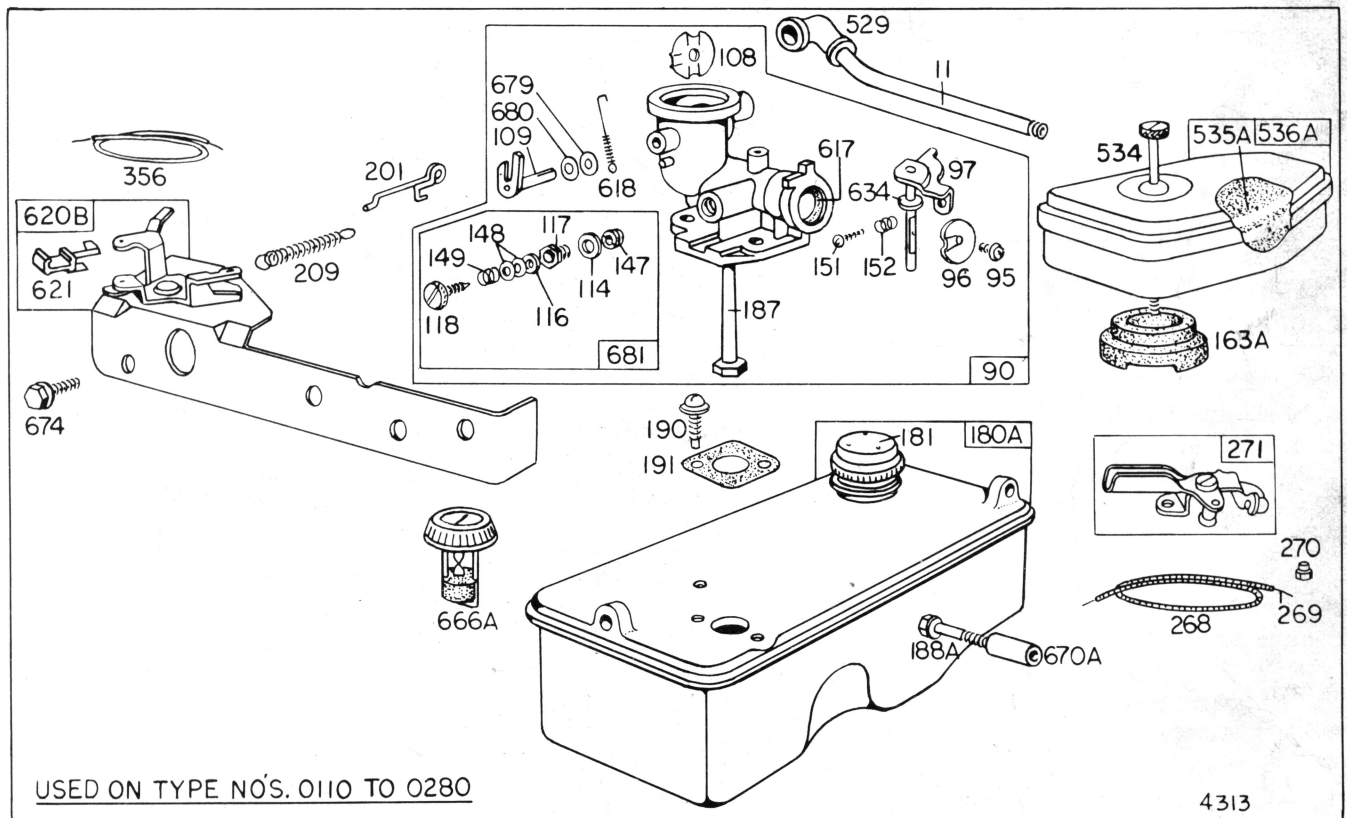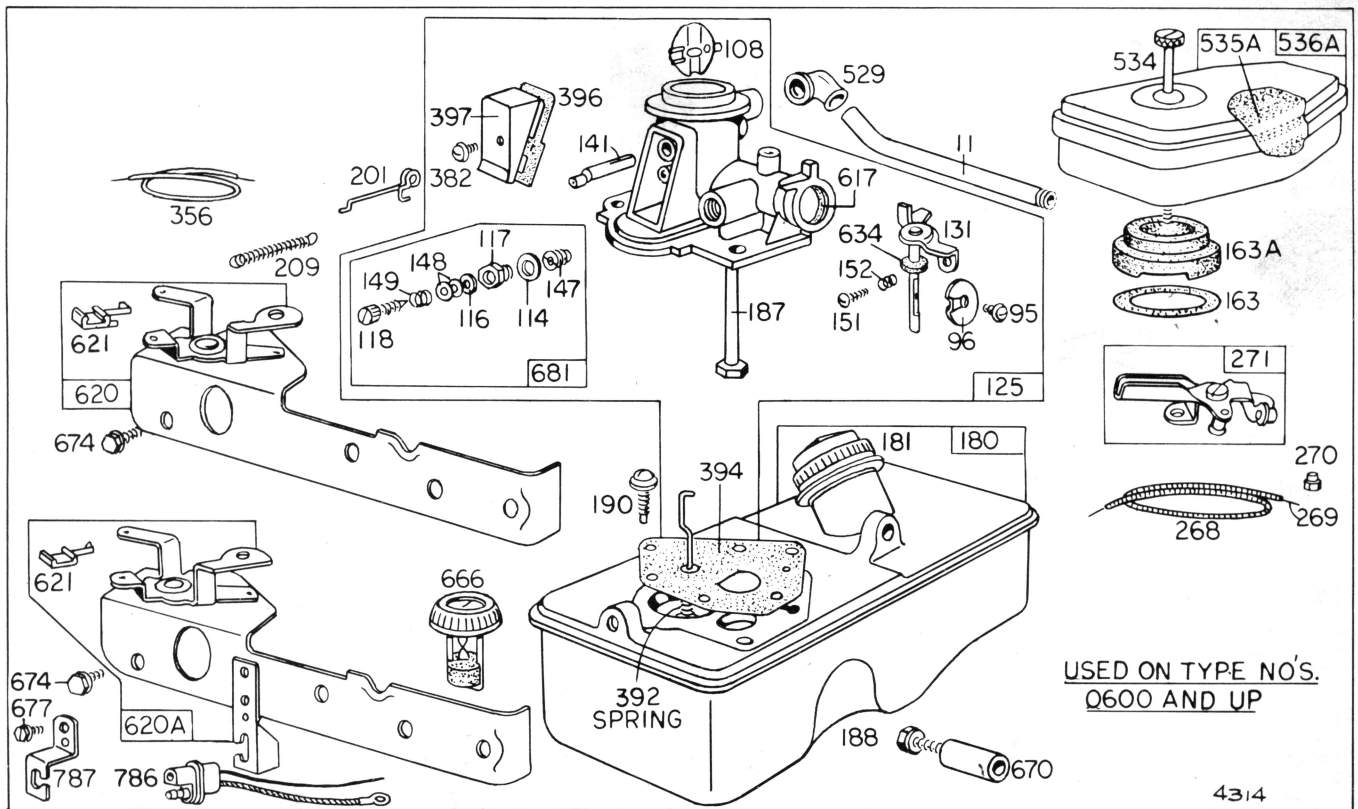

Assemblies include all parts shown in frames.

92500 to 92599

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	298988	Cylinder Assembly			0721, 0722, 0726, 0728,			260235 Crankshaft
2	293708	Bushing—Cylinder			0735, 0738, 0740, 0759,			Used on type No. 0227.
	Note:	Requires special tools for installation.			0762, 0763, 0766, 0770,			260319 Crankshaft
3	†89660	Seal—Oil			0772, 0775, 0778, 0792,			Used on type Nos. 0175, 0180, 0709, 0754.
5	211479	Head—Cylinder			0793, 0795, 0796, 0808,			260370 Crankshaft
7	†270341	Gasket—Cylinder Head			0811, 0813, 0822, 0828,			Used on type Nos. 0136, 0226, 0242, 0711, 0841.
8	298383	Breather—Valve Chamber			0829, 0839, 0860, 0861.			260400 Crankshaft
9	†*270239	Gasket—Valve Cover			260097 Crankshaft			Used on type Nos. 0241, 0712, 0737.
10	93394	Screw—Breather and P. T. O. Gear Sump Cover Mtg. Sem (Ref. No. 86)			Used on type Nos. 0117, 0122, 0141, 0155, 0163, 0164, 0167, 0183, 0208, 0214, 0234, 0252, 0269, 0270, 0603, 0615, 0691, 0693, 0756, 0764, 0801, 0817, 0823, 0824, 0832, 0833, 0835, 0843, 0847, 0853, 0854, 0856.			260411 Crankshaft
11	230802	Tube—Breather			260098 Crankshaft			Used on type No. 0222.
12	†*27586	Gasket—Crankcase—.015" thick (Standard)			Used on type Nos. 0118, 0123, 0153, 0161, 0168, 0172, 0173, 0186, 0187, 0189, 0190, 0191, 0192, 0210, 0213, 0221, 0232, 0235, 0257, 0258, 0262, 0265, 0274, 0604, 0616, 0671, 0684, 0686, 0704, 0705, 0708, 0716, 0718, 0723, 0725, 0733, 0750, 0757, 0771, 0773, 0774, 0775, 0781, 0782, 0785, 0787, 0789, 0797, 0798, 0799, 0805, 0819, 0826, 0831, 0834, 0836, 0846, 0852.			260670 Crankshaft
	*27617	Gasket—Crankcase—.005" thick			260099 Crankshaft			Used on type Nos. 0150, 0152, 0179, 0193, 0194.
	†*27618	Gasket—Crankcase—.009" thick			Uses: 220708 Shim—			260839 Crankshaft
13	93111	Screw—Cylinder Head (1-15/16" long)			Crankshaft, Thrust			Used on type Nos. 0205, 0673.
15	91084	Plug—Oil Drain			Used on type Nos. 0125, 0132, 0171, 0215, 0251, 0641, 0647, 0662, 0665.			260856 Crankshaft
	Note:	93418 Plug—Oil Drain (Socket Head)			260204 Crankshaft			Uses: 220708 Shim—
		Used on type Nos. 0143, 0144, 0145, 0151, 0161, 0165, 0172, 0195, 0197, 0200, 0214, 0220, 0222, 0236, 0237, 0263, 0269, 0679, 0680, 0681, 0711, 0713, 0714, 0716, 0720, 0734, 0747, 0778, 0779, 0792, 0793, 0794, 0795, 0821, 0837, 0838, 0841, 0844.			Used on type Nos. 0146, 0260, 0741.			Crankshaft, Thrust
16	260124	Crankshaft			260224 Crankshaft			Used on type Nos. 0645, 0649, 0664, 0666.
	Note:	260096 Crankshaft			Uses: 220708 Shim—			
		Used on type Nos. 0116, 0121, 0133, 0147, 0158, 0162, 0170, 0176, 0181, 0188, 0196, 0198, 0201, 0211, 0212, 0216, 0220, 0223, 0224, 0225, 0228, 0233, 0236, 0237, 0239, 0249, 0250, 0261, 0263, 0266, 0267, 0268, 0271, 0275, 0277, 0602, 0614, 0675, 0680, 0689, 0692, 0694, 0696, 0698, 0701, 0703, 0707, 0715, 0720,			Crankshaft, Thrust			

* Included in Gasket Set—Part No. 298989.

† Included in Engine Repair Kit—Part No. 390131.

92500 to 92599

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		261007 Crankshaft Uses: 220708 Shim— Crankshaft, Thrust Used on type Nos. 0646, 0650.			0186, 0187, 0217, 0218, 0240, 0808, 0809, 0810.			Used on Model 92590 to 92599 Series.
		261012 Crankshaft Used on type Nos. 0610, 0618, 0702, 0727, 0736, 0742, 0745, 0752, 0777, 0779, 0794, 0802, 0809, 0810, 0830, 0840.			298280 Sump—Oil Used on Model 92590 to 92599 Series.	21	66768	Plug—Oil Filler
		261013 Crankshaft Used on type Nos. 0611, 0619, 0688, 0732, 0739, 0746, 0755, 0758, 0804, 0848, 0859.			298727 Sump—Oil Used on type Nos. 0140, 0254.	22	93032	Screw—Sump Mtg. Sem
		261014 Crankshaft Used on type Nos. 0612, 0620, 0672, 0678, 0706, 0749, 0768, 0788, 0800, 0814, 0820, 0849, 0851.			390017 Sump—Oil Used on type Nos. 0645, 0646, 0649, 0650, 0664, 0666.	22A	93415	Screw—Sump Mtg. Sem (One used in Auxiliary Drive Gear Sump) on Model 92580 to 92599 Series.
		261021 Crankshaft Used on type Nos. 0629, 0637, 0659, 0661.			390068 Sump—Oil Used on type Nos. 0609, 0610, 0611, 0612, 0617, 0618, 0619, 0620, 0654, 0656, 0672, 0676, 0678, 0687, 0688, 0692, 0702, 0706, 0710, 0718, 0727, 0732, 0736, 0739, 0742, 0745, 0746, 0749, 0750, 0751, 0752, 0755, 0757, 0758, 0767, 0768, 0777, 0779, 0784, 0788, 0794, 0800, 0802, 0804, 0814, 0816, 0818, 0820, 0828, 0830, 0840, 0843, 0844, 0845, 0848, 0849, 0850, 0851, 0859.			Note: Use 93032 Screw in the other (5) Sump Mounting Holes.
		261022 Crankshaft Used on type Nos. 0630, 0638.			390149 Sump—Oil Used on type Nos. 0711, 0713, 0714, 0821, 0837, 0838, 0841.	23	297949	Flywheel—Magneto
		261023 Crankshaft Used on type Nos. 0631, 0639, 0815.						Note: 296884 Flywheel— Magneto Used on type Nos. 0134, 0140, 0143, 0153, 0156, 0157, 0161, 0163, 0164, 0166, 0171, 0172, 0174, 0175, 0176, 0177, 0178, 0180, 0186, 0187, 0197, 0200, 0201, 0203, 0205, 0207, 0210, 0254, 0258, 0259, 0673, 0677, 0679, 0700, 0709, 0717, 0754, 0807, 0861.
		261024 Crankshaft Used on type Nos. 0632, 0640.				23A	299982	Flywheel—Magneto
		261029 Crankshaft Used on type No. 0710.	18A	299058	Sump—Oil Used on Model 92580 to 92589 Series.	24	†61760	Key—Flywheel
		261030 Crankshaft Used on type Nos. 0609, 0617, 0654, 0656, 0676, 0687, 0751, 0767, 0784, 0845.			Note: 390015 Sump—Oil Used on type Nos. 0629, 0630, 0631, 0632, 0637, 0638, 0639, 0640, 0659, 0661, 0815.	25	298904	Piston Assy.—Standard
		261050 Crankshaft Used on type Nos. 0713, 0714, 0816, 0818, 0821, 0837, 0838, 0844.					298905	Piston Assy.—.010" O.S.
18	293512	Sump—Oil					298906	Piston Assy.—.020" O.S.
	Note:	293597 Sump—Oil Used on type Nos. 0175, 0176, 0205, 0673, 0754.					298907	Piston Assy.—.030" O.S.
		295041 Sump—Oil Used on type Nos. 0156,				MODEL 92500 SERIES PISTON RING SETS:		
							Note:	For Chrome Piston Ring Set — standard size — order Part No. 299742.
						26	298982	Ring Set—Standard Piston Consists of: 211467 Ring, Piston, Comp., Top, Standard 211468 Ring, Piston, Comp., Center, Standard 211469 Ring, Piston, Oil, Standard
			20	†291841	Seal—Oil		298983	Ring Set— .010" O.S. Piston Consists of: 211504 Ring, Piston, Comp., Top, .010" O.S.
				Note:	294167 Seal—Oil Used on type Nos. 0140, 0254.			
					294167 Seal—Oil (Crankshaft—P. T. O. Side)			
					298041 Seal—Oil (Auxiliary Drive Shaft)			

† Included in Engine Repair Kit—
Part No. 390131.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		211503 Ring, Piston, Comp., Center, .010" O.S.		Note:	299563 Cam Gear Worm and Oil Slinger Assy. Used on type No. 0668.	90	298986	Carburetor Assembly Used on type Nos. 0110 to 0300.
		211505 Ring, Piston, Oil, .010" O.S.	47	294652	Oil Slinger Gear and Bracket	95	93499	Screw—Throttle Valve Mounting Sem
298984		Ring Set—.020" O.S. Piston	52	270345	Gasket—Intake Elbow	96	211203	Valve—Throttle
		Consists of:	54	93485	Screw—Intake Elbow Mtg.		Note:	211237 Valve—Throttle Used on type Nos. 0711, 0712, 0714, 0821, 0837, 0838, 0841.
		211507 Ring, Piston, Comp., Top, .020" O.S.	56	298738	Pulley—Rewind Starter	97	298821	Shaft and Lever—Throttle
		211506 Ring, Piston, Comp., Center, .020" O.S.	57	294303	Spring—Rewind Starter	108	298819	Valve—Choke
		211508 Ring, Piston, Oil, .020" O.S.	58	66694	Rope—Rewind Starter—47-1/8" long		Note:	68638 Valve—Choke Used on type Nos. 0711, 0712, 0714, 0821, 0837, 0838, 0841.
		298985 Ring Set—.030" O.S. Piston		Note:	If longer rope is needed, order No. 66684 and cut to required length.	109	68628	Shaft and Lever—Choke
		Consists of:	59	230228	Pin—Starter Rope	114	66594	Gasket—Needle Valve Nut
		211511 Ring, Piston, Comp., Top, .030" O.S.	60	66728	Grip—Starter Rope	116	65978	Packing—Needle Valve
		211510 Ring, Piston, Comp., Center, .030" O.S.	61	†68618	Bumper—Starter Pulley	117	230590	Nut—Needle Valve
		211512 Ring, Piston, Oil, .030" O.S.	65	93587	Screw—Vertical Pull Starter Mounting	118	†23433	Valve—Needle
27	26026	Lock—Piston Pin	66	298310	Clutch Assy.—Rewind and Wind-up Starter	120	92290	Washer—Lock—No. 10 x 1/16 x 3/64"
28	298909	Pin Assembly—Piston—Standard	67	211383	Housing—Starter Clutch	125	390064	Carburetor Assembly Used on type Nos. 0600 and up.
	298908	Pin Assembly—Piston—.005" O.S.	68	63770	Ball—Clutch		Note:	390833 Carburetor Assy. Used on type Nos. 0711, 0712, 0714, 0821, 0837, 0838, 0841.
29	294201	Rod Assy.—Connecting	69	66718	Washer—Thrust	131	299977	Shaft and Lever—Throttle
	Note:	For Connecting Rod with .020" undersize Crank-pin Bore — order No. 296079.		Note:	68938 Washer—Thrust Used on type No. 0668.	141	68908	Shaft—Choke
31	220756	Lock—Conn. Rod Screw	70	298436	Ratchet—Rewind and Wind-up Starter	147	230591	Seat—Needle Valve
32	92296	Screw—Connecting Rod	71	221653	Washer—Clutch Retainer	148	22235	Washer—Needle Valve (2)
33	296676	Valve—Exhaust	73	221661	Screen—Starter Pulley	149	26336	Spring—Needle Valve
34	296677	Valve—Intake	74	93490	Screw—Sem	151	93524	Screw—Machine, Rd. Hd.—5-40 x 1/2"
35	260552	Spring—Intake Valve	75	220865	Washer—Spring	152	260746	Spring—Throttle Adj.
36	26478	Spring—Exhaust Valve	76	68238	Washer—Ratchet Sealing	163	†270816	Gasket—Air Cleaner Mtg.
40	93312	Retainer—Valve Spring	83	230831	Shaft—Drive	163A	†270621	Gasket—Air Cleaner Mtg.
45	230173	Tappet—Valve		Note:	230860 Shaft—Drive Used on type Nos. 0157, 0203, 0259, 0815.	180	298475	Tank Assembly—Fuel Used on type Nos. 0110 to 0300.
46	210453	Gear—Cam			230870 Shaft—Drive Used on type No. 0264.	180A	299973	Tank Assembly—Fuel Used on type Nos. 0600 and up.
	Note:	211337 Gear—Cam Used only on Model 92590 to 92599 Series.	83A	230856	Shaft—Drive Used on type Nos. 0243, 0244.	181	298425	Cap—Fuel Tank
46A	298803	Cam Gear, Worm and Oil Slinger Assembly		Note:	230952 Shaft—Drive Used on type Nos. 0279, 0697.	187	†296476	Pipe—Fuel
					230906 Gear—Drive Used on type No. 0668.	188	93585	Screw—Fuel Tank and Starter Mounting
			86	221780	Cover—Sump	188A	93444	Screw—Hex. Hd. Sem
			87	298041	Seal—Oil			
			88	270328	Gasket—Sump Cover			

† Included in Engine Repair Kit—Part No. 390131.

92500 to 92599

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
190	93440	Screw—Fuel Tank Mounting Sem				269	26099	Wire—Control, 54" long
191	†*270250	Gasket—Fuel Tank Mtg.			261034 Spring—Governor For 2900 to 3100 RPM Top Speed Set - No Load Used on type Nos. 0704, 0705, 0730, 0732, 0745, 0749, 0759, 0760, 0763, 0768, 0771, 0773, 0774, 0775, 0776, 0787, 0793, 0794, 0795, 0798, 0801, 0813, 0822, 0825, 0832, 0833, 0834, 0858.	Note:		If longer wire is needed, specify length in inches; if shorter wire is needed, order No. 26099 and cut to required length.
200	68388	Blade—Governor			261060 Spring—Governor For 3100 to 3300 RPM Top Speed Set - No Load Used on type Nos. 0671, 0706, 0707, 0719, 0720, 0749, 0753, 0762, 0769, 0781, 0783, 0784, 0829, 0830, 0839, 0840, 0846, 0849, 0861.	270	63426	Locknut—Control Wire Casing
201	†260878	Link—Governor			261061 Spring—Governor For 3600 to 3800 RPM Top Speed Set - No Load Used on type Nos. 0687, 0738, 0812, 0819, 0845, 0850, 0851, 0857.	271	290568	Lever Assy.—Control
	Note:	261027 Link—Governor Used only on Model 92505, 92508, 92585, 92588, 92595, 92598 Series.			261105 Spring—Governor For 3000 to 3200 RPM Used on type Nos. 0672, 0688, 0693, 0710, 0731, 0743, 0755, 0775, 0778, 0779, 0782, 0788, 0790, 0791, 0792, 0796, 0799, 0800, 0802, 0805, 0815, 0817, 0826, 0827, 0828, 0848, 0859, 0860.	298	220859	Locknut—Muffler
209	†260875	Spring—Governor For 3400 to 3600 RPM Top Speed Set - No Load			261106 Spring—Governor For 2800 to 3000 RPM Used on type Nos. 0780, 0855.	299	294441	Muffler—Exhaust
	Note:	260876 Spring—Governor For 3900 to 4100 RPM Top Speed Set - No Load Used on type Nos. 0143, 0149, 0153, 0154, 0155, 0156, 0157, 0161, 0165, 0166, 0172, 0174, 0178, 0180, 0190, 0192, 0195, 0197, 0200, 0201, 0203, 0206, 0210, 0211, 0212, 0222, 0223, 0226, 0234, 0257, 0258, 0259, 0270, 0271, 0679, 0709, 0716, 0717, 0734, 0744, 0747.	265	22372	Clamp—Casing	300	298830	Muffler—Exhaust
		260877 Spring—Governor For 3200 to 3400 RPM Top Speed Set - No Load Used on type Nos. 0133, 0136, 0147, 0151, 0158, 0164, 0171, 0181, 0209, 0227, 0228, 0236, 0237, 0241, 0242, 0243, 0244, 0255, 0262, 0263, 0266, 0267, 0269, 0272, 0275, 0279, 0670, 0674, 0678, 0680, 0681, 0682, 0683, 0684, 0689, 0691, 0692, 0694, 0695, 0696, 0697, 0698, 0711, 0712, 0713, 0714, 0715, 0722, 0724, 0728, 0729, 0737, 0739, 0750, 0751, 0752, 0764, 0767, 0785, 0789, 0806, 0816, 0818, 0821, 0824, 0831, 0835, 0837, 0838, 0841, 0842, 0843, 0844, 0847, 0852, 0853, 0854, 0856.	267	93469	Screw—Clamp Mounting	Note:	29807	Muffler
			268	66986	Casing—Control Wire—48" long	220859		Locknut—Muffler
				Note:	If longer casing is needed, specify length in inches; if a shorter casing is needed, order No. 66986 and cut to required length.	91943		Elbow—Exhaust Used on type No. 0164.
						299106		Muffler—Exhaust Used on type Nos. 0155, 0157, 0203, 0234, 0243, 0244, 0249, 0250, 0259, 0268, 0270, 0273, 0279, 0688, 0694, 0695, 0696, 0697, 0711, 0712, 0713, 0714, 0739, 0752, 0755, 0764, 0815, 0821, 0827, 0835, 0837, 0838, 0841, 0843, 0847, 0853, 0854, 0856, 0859.
						391025		Muffler—Exhaust Used on type No. 0861.
						304	298599	Housing—Blower (For Rewind Starter)
						Note:	298467	Housing—Blower (For Rope Starter) Used on Model 92501 Series.
							298568	Housing—Blower (For Rewind Starter) Used on type Nos. 0133, 0135, 0136, 0147, 0149, 0151, 0161, 0162, 0165, 0168, 0169, 0172, 0175, 0176, 0183, 0185, 0188, 0189, 0192, 0200, 0204, 0205, 0210, 0212, 0215, 0217, 0222, 0223, 0224, 0226, 0227, 0238, 0242, 0253, 0262, 0264, 0267, 0276, 0673, 0674, 0685, 0701, 0703, 0708, 0716,

* Included in Gasket Set—Part No. 298989.

† Included in Engine Repair Kit—
Part No. 390131.

92500 to 92599

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		0719, 0722, 0724, 0725, 0734, 0748, 0754, 0760, 0771, 0861. 298570 Housing—Blower (For Wind-up Starter) Used on Model 92506, 92596 Series. 298602 Housing—Blower (For Rewind Starter) Used on type Nos. 0180, 0201, 0709. 298604 Housing—Blower (For Rewind Starter) Used on type Nos. 0148, 0153, 0154, 0155, 0156, 0157, 0167, 0182, 0193, 0211, 0213, 0218, 0229, 0243, 0245, 0247, 0249, 0255, 0258, 0265, 0266, 0268, 0270, 0273, 0274, 0278, 0279, 0670, 0682, 0683, 0684, 0686, 0689, 0691, 0693, 0694, 0695, 0697, 0698, 0735, 0738, 0743, 0750, 0753, 0756, 0764, 0765, 0766, 0772, 0773, 0775, 0780, 0781, 0782, 0783, 0787, 0789, 0790, 0791, 0799, 0801, 0803, 0811, 0822, 0824, 0827, 0828, 0829, 0835, 0839, 0842, 0843, 0846, 0847, 0850, 0852, 0854, 0855, 0856, 0857, 0858. 298606 Housing—Blower (For Rewind Starter) Used on type Nos. 0143, 0144, 0159, 0160, 0170, 0171, 0177, 0197, 0208, 0209, 0214, 0220, 0233, 0236, 0237, 0241, 0261, 0263, 0269, 0275, 0277, 0675, 0679, 0680, 0681, 0690, 0692, 0699, 0700, 0707, 0711, 0712, 0720, 0721, 0728, 0737, 0761, 0763, 0770, 0778, 0792, 0793, 0795, 0796, 0808, 0813, 0817, 0825, 0826, 0831, 0832, 0833, 0834,			0836, 0841, 0860. 298608 Housing—Blower (For Rewind Starter) Used on type Nos. 0146, 0178, 0202, 0251. 299103 Housing—Blower (For Rewind Starter) Used on type No. 0786. 299983 Housing—Blower (For Vertical Pull and Electric Starter) Used on Model 92505, 92508, 92585, 92588, 92595, 92598 Series. 305 93559 Screw—Blower Housing Mounting Sem 306 221805 Shield—Cylinder 307 93490 Screw—Cylinder Shield and Rotating Screen Mounting Sem 309 390073 Motor—Starter 310 93609 Bolt—Starter Motor 311 390204 Brush Kit—Starter Motor 324 222063 Screen—Rotating 325 298731 Starter Pulley with Screen 329 93294 Screw—Sem 330 294584 Rope—Starter 331 220865 Washer—Flywheel 332 92284 Nut—Flywheel 333 298502 Armature—Magnet 334 93381 Screw—Armature Mtg. Sem 335 93435 Screw—Armature and Governor Blade Mtg. Sem 337 298809 Plug—Spark (with Gasket) 1-1/2" High—(38 mm.) Note: Spark Plugs 298809, 29693 and 293918 use Ignition Cable Terminal No. 221798. 29693 Plug—Spark (with Gasket) 2" High—(51 mm.) 293918 Plug—Spark (with Gasket) Used on type Nos. 0162, 0222, 0701, 0702. 340 26018 Spring—Breaker Arm 341 93381 Screw—Breaker Arm Mounting Sem 342 †65704 Plunger—Breaker Point		344 93042 Screw—Condenser Clamp Mounting Sem 345 220366 Cover—Breaker Point and Condenser 346 93014 Screw—Dust Cover Mounting 356 298479 Wire—Ground Note: 298581 Wire—Ground Used on type No. 0812. 358 298989 Gasket Set 363 19069 Puller—Flywheel (Optional Accessory) 372 220477 Clamp—Condenser 374 92813 Washer—Lock—Shakeproof 375 †294628 Breaker Points and Condenser Set Note: 299061 Ignition Kit Includes: 294628 Point Set †65704 Plunger †61760 Key—Flywheel 377 93065 Key—Woodruff No. 505 382 93545 Screw—Choke Link Cover 392 261016 Spring—Diaphragm Note: 261015 Spring—Diaphragm Used on type Nos. 0711, 0712, 0714, 0821, 0837, 0838, 0841. 394 299637 Diaphragm—Carburetor Note: 390834 Diaphragm—Carburetor Used on type Nos. 0711, 0712, 0714, 0821, 0837, 0838, 0841. 396 270571 Gasket—Choke Link Cover 397 211678 Cover—Choke Link 409 299839 Control—Dial 410 260993 Link—Control 423 93599 Screw—Sem 455 297542 Cup, Spring and Release Assembly 458 298431 Handle Assy.—Cranking 459 221332 Pawl—Ratchet 460 93272 Retainer—Ratchet Pawl 461 93298 Screw—Handle Mounting 462 221237 Washer—Handle Mounting 467 299858 Knob—Dial Control 508 93158 Screw—Sem	

† Included in Engine Repair Kit—
Part No. 390131.

92500 to 92599

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
513	390074	Clutch Assembly—Electric Starter	620	299974	Plate—Carburetor Control Used on type Nos. 0500 and up, except those with Electric Starters.			260846 Link—Control
515	260537	Spring—Ratchet Pawl						260867 Washer—Swivel Pin
516	260374	Spring—Connector (Condenser Post)						Used on type Nos. 0185, 0193, 0194, 0243, 0244, 0245, 0246, 0249, 0250.
517	390042	Starter Pulley with Screen				621	297472	Switch—Stop
	Note:	222063 Screen Uses: 93490 Screw—Screen Mtg. Used on type Nos. 0821, 0838, 0859.			Note: 299975 Plate—Carburetor Control Used on type Nos. 0652, 0655, 0656, 0657, 0660, 0661, 0662, 0665, 0666, 0673, 0682, 0700, 0711, 0712, 0716, 0737, 0746, 0747, 0754, 0758, 0762, 0769, 0783, 0787, 0790, 0797, 0807, 0811, 0814, 0827, 0831, 0836, 0841, 0842, 0845, 0846, 0847, 0849, 0850, 0854, 0855, 0857, 0860.	625	298775	Tube—Fuel Intake
523	299978	Cap with Dipstick—Oil Filler				634	270167	Washer—Throttle Shaft (Felt)
	Note:	For complete Oil Fill Cap with Dipstick and Oil Filler Tube Assy. — order Part 299988.				635	66538	Elbow—Spark Plug
523A	298664	Cap with Dipstick—Oil Filler	620A	390199	Carburetor Control Plate and Harness Plug Bracket Used on type Nos. 0600 and up with Electric Starters.	646	222086	Bracket—Electric Starter Mounting
	Note:	For complete Oil Fill Cap with Dipstick and Oil Filler Tube Assy. — order Part 298684.				655	222057	Anchor—Spring
524	270306	Seal—Tube (Used between Tube and Sump)			Note: 390200 Carburetor Control Plate and Harness Plug Bracket Used on type Nos. 0654, 0659, 0664, 0820.	665	296768	Oil Minder
525	299987	Tube—Oil Filler (Includes No. 222064 Tube Clamp)				666	299992	Gauge—Fuel Level Used only on type Nos. 0600 and Up.
525A	298663	Tube—Oil Fill	620B	298823	Plate—Carburetor Control Used on type Nos. 0110 to 0300.	666A	297073	Gauge—Fuel Level Used only on type Nos. 0110 to 0300.
529	67838	Grommet—Breather				670	211740	Spacer—Fuel Tank
534	93374	Screw—Air Cleaner			Note: 298837 Plate—Carburetor Control Used on type Nos. 0134, 0139, 0147, 0151, 0158, 0161, 0164, 0168, 0172, 0175, 0176, 0177, 0182, 0195, 0205, 0212, 0214, 0217, 0218, 0221, 0224, 0225, 0228, 0237, 0240, 0241, 0242, 0254.	670A	211412	Spacer—Fuel Tank
535	270579	Element—Air Cleaner Used on type Nos. 0600 and up.				673	93438	Screw—Receptacle Retainer
535A	270251	Element—Air Cleaner Used on type Nos. 0110 to 0300.				674	93447	Screw—Tank to Bracket
536	390055	Cleaner Assembly—Air			298652 Control Assy. — Dial Uses: 93475 Screw—Sem (Mounting to Blower Housing) Includes: 93461 Screw—Swivel	675	93408	Washer—Starter Housing Spring
536A	298566	Cleaner Assembly—Air				676	221794	Deflector—Muffler
544	390206	Armature—Starter				677	93606	Screw—Muffler Deflector and Harness Retainer
548	390208	Washer Set—Starter Motor				679	270382	Washer—Choke Shaft (Felt)
592	90356	Nut—Hex. —10-24				680	221839	Washer—Choke Shaft
608	298466	Starter Assy. —Rewind Note: For 110 Volt Electric Starter Kit — Order No. 295330.				681	299060	Needle Valve Kit
617	†270344	Seal—Intake Tube				720	93474	Pin—Gear to Shaft
618	260870	Spring—Choke Return				721	221779	Stop—Drive Shaft
						727	211757	Cover—Electric Starter
						764	299946	Starter Assembly—Vertical Pull
						765	299947	Housing—Vertical Pull Starter
						766	280022	Pulley—Rope (Small)
						767	93586	Pin—Small Rope Pulley
						768	299948	Pulley and Gear Assy.
						769	66734	Rope—Vertical Pull Starter
						771	299961	Clip—Vertical Pull Starter

† Included in Engine Repair Kit—Part No. 390131.

92500 to 92599

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
772	93598	Screw—Sem	786	390102	Harness—Starter Motor (Cylinder Head end)	792	390137	Bracket Assembly—Battery Mounting
773	390112	Retainer Assembly—Spur Gear	787	222088	Retainer—Harness Plug	793	261049	Clip—Wiring Harness
774	280035	Insert—Starter Handle	789	390207	Wiring Harness Assy.—Mower	795	390122	Switch Assy.—Starter—Ignition
775	280036	Grip—Starter Rope			(55" long with 32" long side lead wire — for switch on handle)		Note:	390128 Switch Assy.—Starter—Ignition (less Housing) Used on type No. 0751.
776	222049	Guide—Rope				797	390201	Nut Set
777	390066	Spring—Vertical Pull Starter			Note: 390372 Wiring Harness Assy.—Mower (12" long with 8" long side lead wire — for switch on deck)	798	590316	Key Set—Starter Switch
778	280021	Cover—Vertical Pull Starter Cover	790	390123	Battery—Electric Starter	799	211773	Housing—Starter Switch
781	280034	Cap—Electric Starter Pulley			Note: If this Battery does not fit, refer to Equipment Manufacturer.	800	222212	Retainer—Switch Receptacle
782	280038	Gear—Electric Starter Spur	791	390197	Charger—Battery	801	390202	Motor Output End Cover and Mounting Bracket
783	230960	Gear—Electric Starter Pinion				802	390203	Cap Assembly—End
784	222085	Cover—Electric Starter Clutch Gear				803	390205	Shell to Housing
785	270610	Gasket—Electric Starter Clutch Gear Cover				820	390131	Engine Repair Kit
						822	297518	Starter Assy.—Wind-up

